
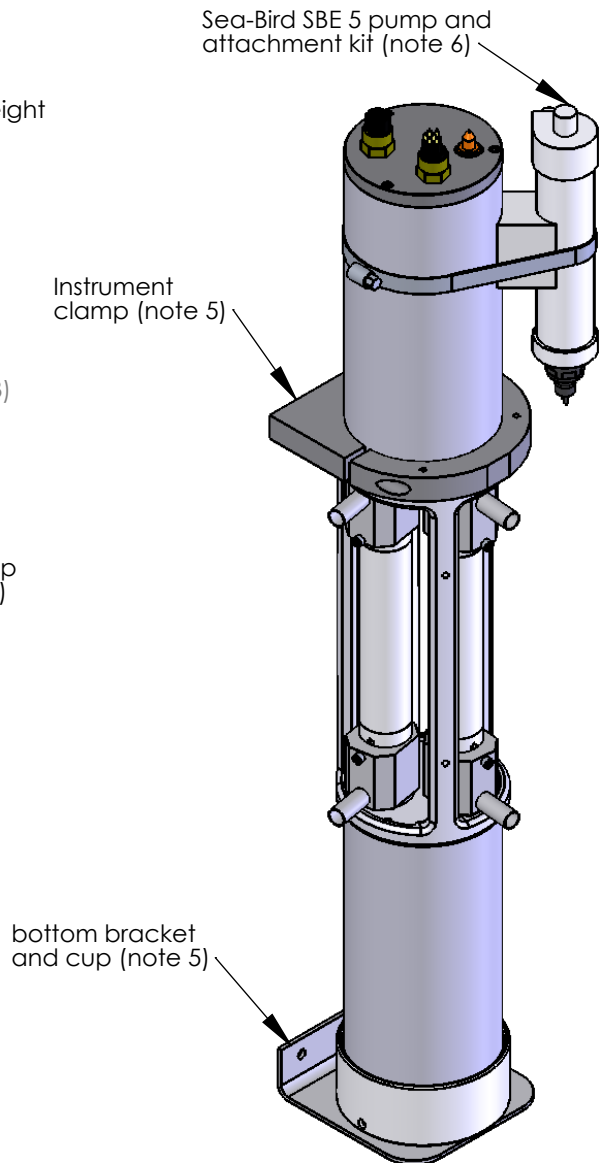


Mounting shall be rugged and must not impart any twisting force between the upper and lower portions of the instrument. The mounting kits and pump are available separately from WET Labs. They are not included with the instrument.

Notes:

1. Top of frame location allows room for cable bends and plumbing system.
2. Clamping close to central strut will best support the instrument and leave the most room for attaching a pump.
3. (12mm) minimum.
4. Bottom shelf is drilled for 1/4-20 screws. Locknuts (nylon insert) are recommended.
5. Instrument clamp, bottom bracket/cup, and hardware for mounting to a WET Labs frame are included in mounting kit P/N FAA-000500.
6. Pump attachment kit P/N FAA-000506. Includes 316 stainless hose clamp as shown, size SAE 80 (4-5.5" [102-140mm]).
7. Keep this area clear for best access to flow tubes.

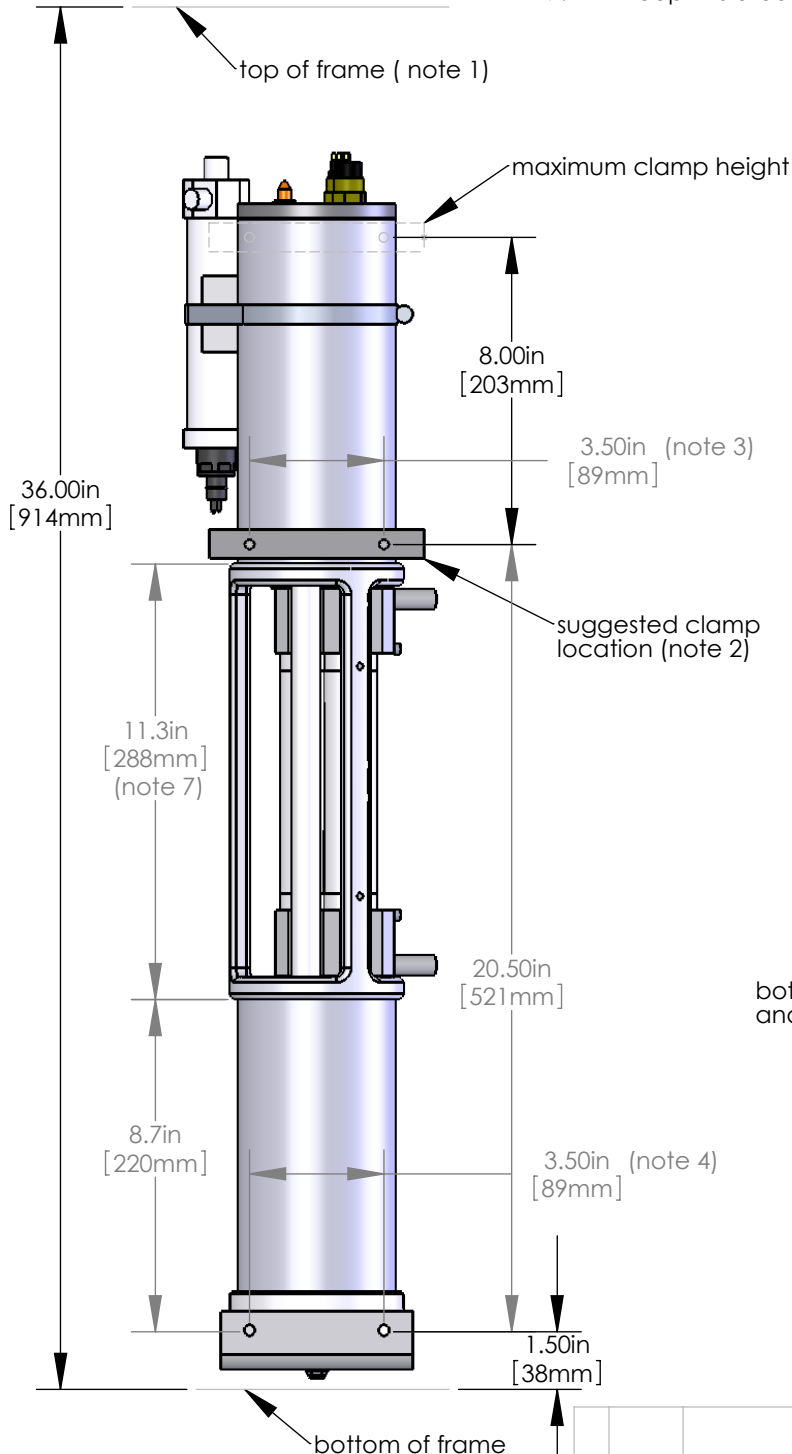

WET Labs

620 Applegate St.
Philomath, OR 97370
541-929-5650
www.wetlabs.com

ac-s mounting details

SIZE A	DWG. NO. 535501	REV. 0
SCALE 1:5 DIMENSIONS ARE INCHES UNLESS NOTED SHEET 1 OF 1		
DRAWN BY: A.R. DERR		3/30/2009

REV	DATE	DESCRIPTION	BY
REVISIONS			