

SEA-BIRD ELECTRONICS, INC.


1808 136th Place N.E., Bellevue, Washington 98005 USA Telephone: (425) 643-9866 Telex: 292915 SBEI UR Fax: (425) 643-9954 email: seabird@seabird.com

SBE P/N: 30017 / 30617

SBE Deck Unit Rack Mount Bracket Kits

KIT CONTENTS

SBE PN	Parts Descriptions	Primary SBE Application	Qty
30617	TDJ Deck Unit Rack Mount	SBE 33, and Carousel Deck Units	2
30017	TDJ Deck Unit Rack Mount	SBE 11, and Full Sized Deck Units	2
Included with bracket	Mach Screw, 10-32 x 3/8 Oval Head	Secure Rack mount ears to Deck Unit	4
Included with bracket	Mach Screw, 10-32 x ½ Oval Head	Secure Rack Mount ear/Deck Unit Assembly to fixture	4

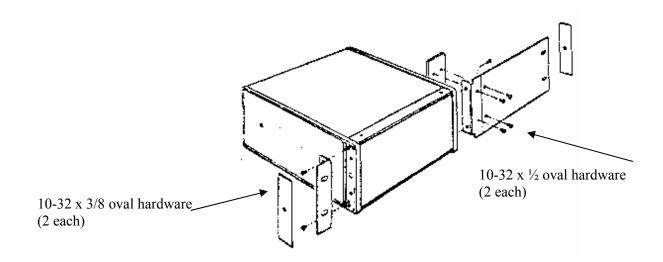

- 1. Remove the filler covers from Deck Unit
- 2. Install rack mounting brackets in the location of the removed filler covers using the two 10-32 x $\frac{1}{2}$ oval head screws that were holding the filler covers on.
- 3. If the full rack adaptor is used, attach the rack mounting bracket and extension plate to the coupler plate using $10-32 \text{ x } \frac{1}{2}$ " truss head screws
- 4. Secure front of mounting brackets to any fixture with the 10-32 x 3/8" oval head screws.

Parent Part Number: 30017 / 30617 SBE Drawings:

Imbedded Rack Mount Bracket Installation Graphic

Sea-Bird Electronics Procedure

PROCEDURE NUMBER: 67059

TITLE: SBE Rack Mount Kit for Deck Units

REVISION: A

EFFECTIVE DATE: 10/29/03

CHECKED BY: PAGE 1 of 1