




DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.
10/04	A	ADD NOTE	CB	KH	

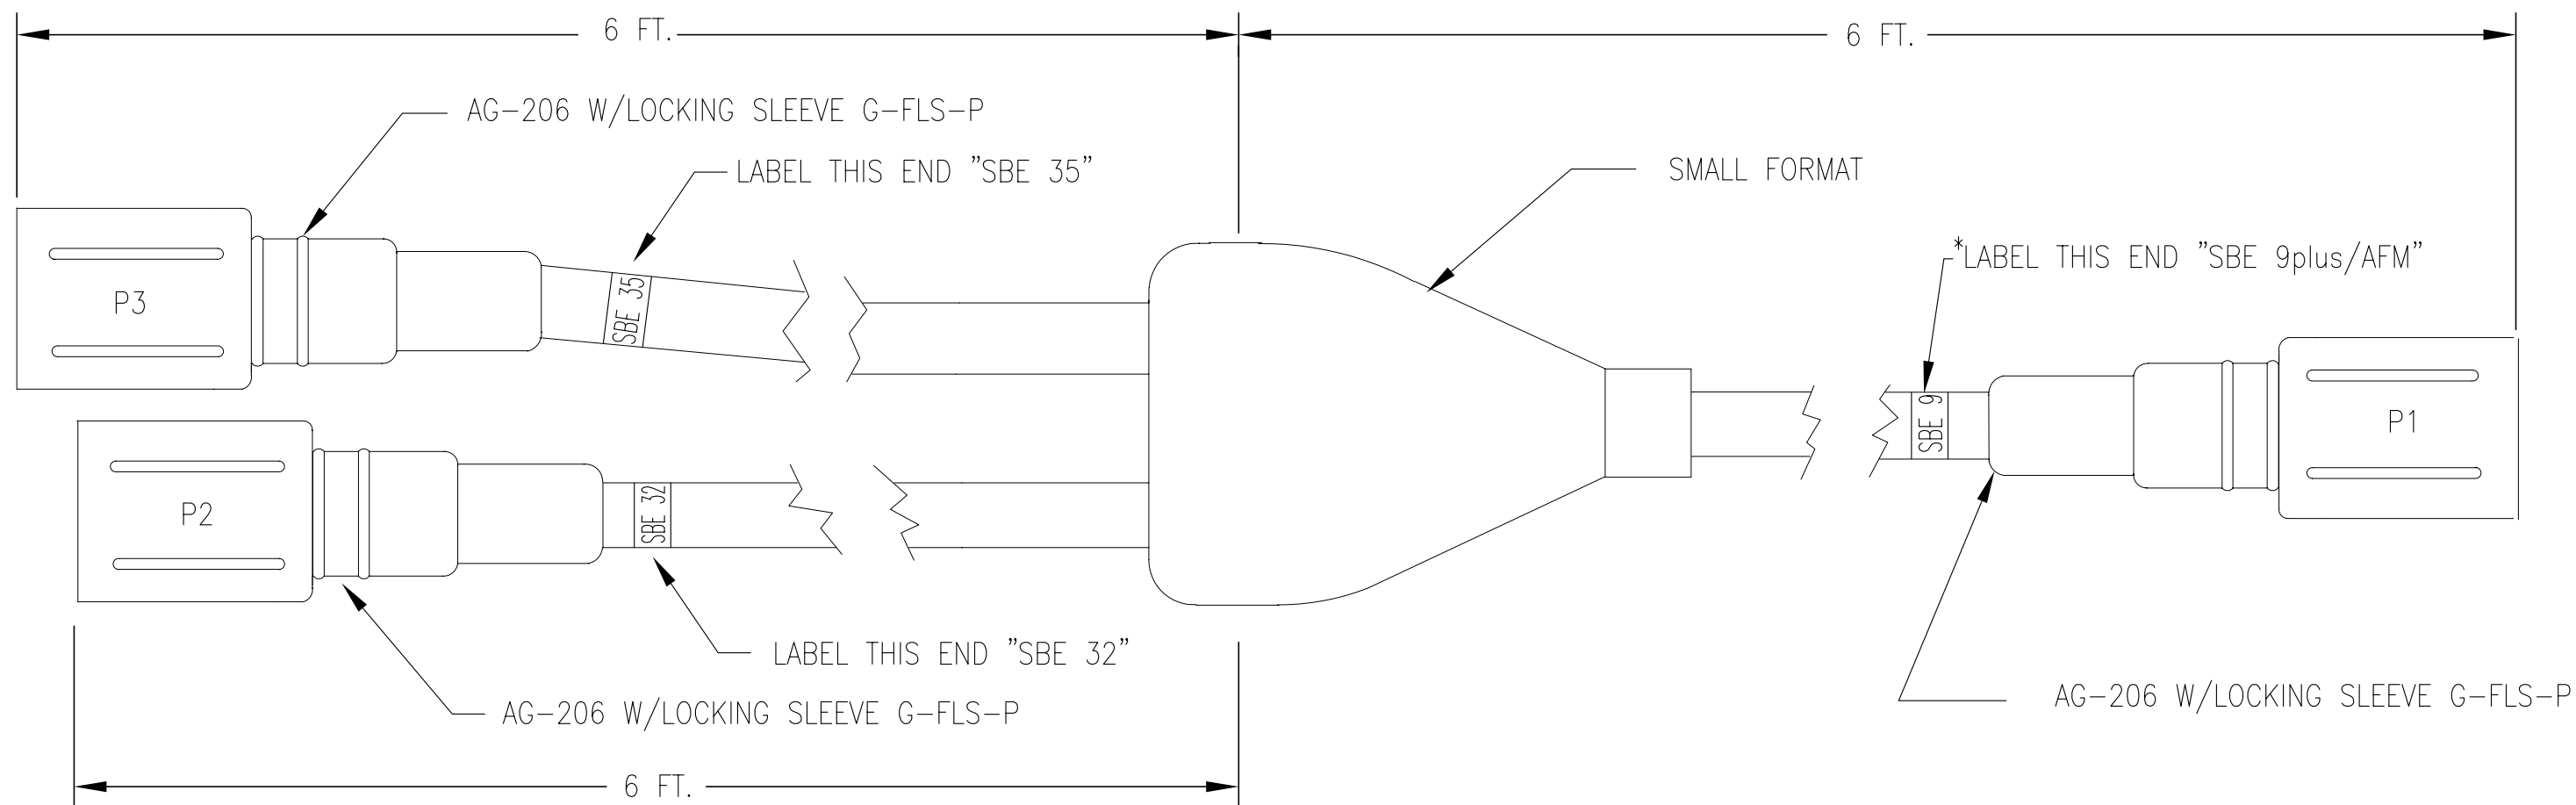


*SBE 9plus/AFM	SBE 32	SBE 35
P1 AG-206	P2 AG-206	P3 AG-206
PIN 1	PIN 1	PIN 1
PIN 2	PIN 2	PIN 2
PIN 3	NC	PIN 3
PIN 4	NC	NC
PIN 5	NC	NC
PIN 6	PIN 6	PIN 6
NC	PIN 3	PIN 5

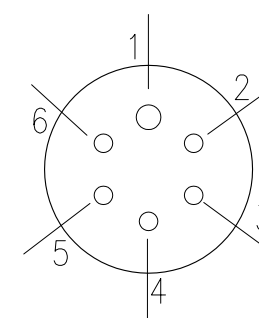

P1

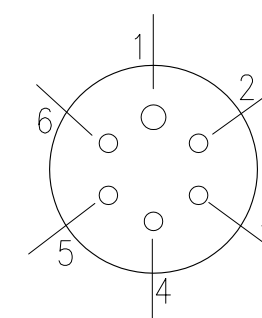

P2

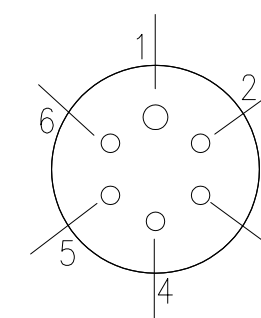

P3

TOLERANCES	SEA-BIRD ELECTRONICS, INC			
FRACTIONAL	P/N 171220	SCALE 1:1	DRAWN BY CEG	APPR BY RB
DECIMAL	TITLE SBE35 v2 TO SBE 9/32 Y-CABLE			
ANGULAR	DATE 9.16.98	DRAWING NUMBER 32208	REV A	

*When used as 32/35/AFM or 32/35/17plusV2 combination, connect P1 to AFM (JB2) or 17plusV2 (J3)