


DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.
8/27/01	A	CHANGED CABLE TYPE		LRG	
5.17.05	B	ADDED CDOM TO TABLE	CB	KLP	
7.23.09	C	ECN 1247: CHANGED CABLE TYPE	CB	PC	CB

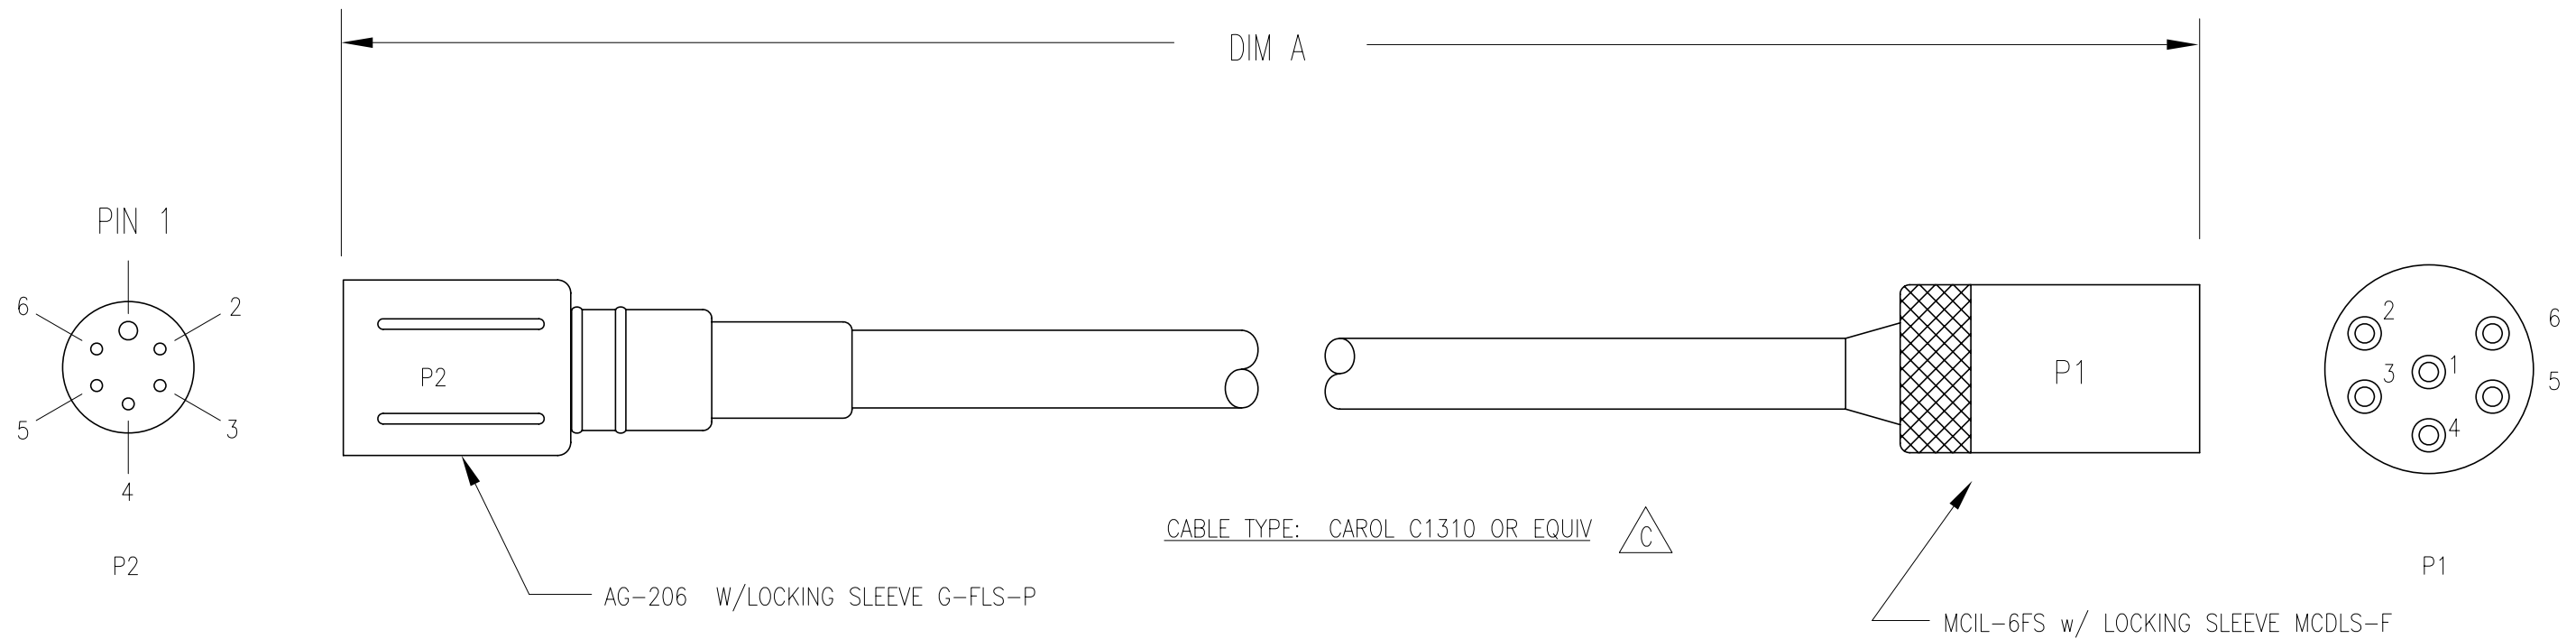

SBE PN	DIM A
171575	60 INCHES
172163	24 INCHES
172395	42 INCHES

P1 (MCIL-6FS)	P2 (AG-206)	SIGNAL
PIN 1	PIN 1,6	POWER COMMON
PIN 2	PIN 2	SEAPOINT SIGNAL
PIN 3	PIN 3	SEAPOINT GROUND
PIN 4	---	---
PIN 5	---	---
PIN 6	PIN 4	+15 VDC

SEAPOINT	GAIN	RANGE
TURBIDITY	20X	125 FTU
FLUOROMETER	10X	15 µg/l
CDOM (SUVF)	10X	150 µg/l

SEA-BIRD ELECTRONICS, INC

P/N	SCALE	DRAWN BY	LRG
SEE TABLE	NTS	APPROVED BY	
CABLE: AG-206 TO MCIL-6FS SEAPOINT			
DATE	DWG NO.	SHEET	REV
8/14/01	32575	1 of 1	C