



DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.

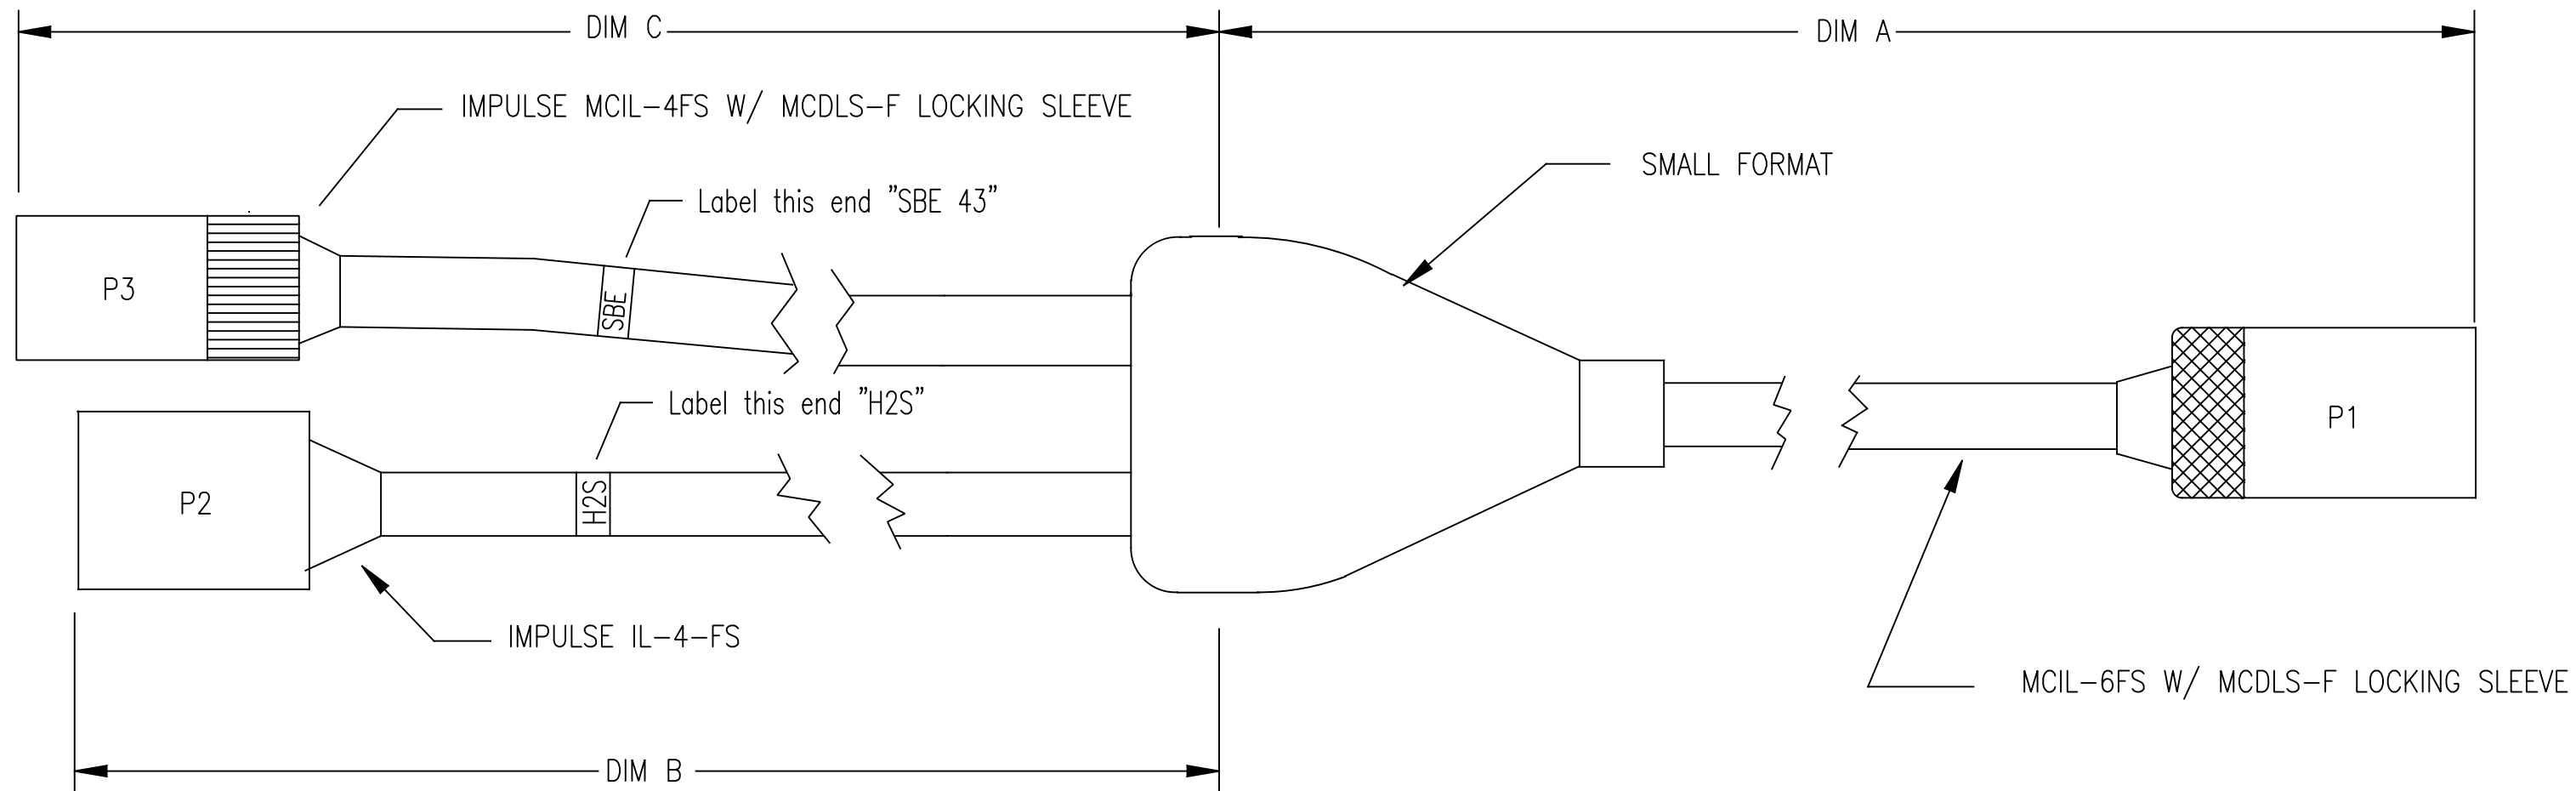

SBE Part Number	DIM 'A'	DIM 'B'	DIM 'C'
173464	20"	25"	25"

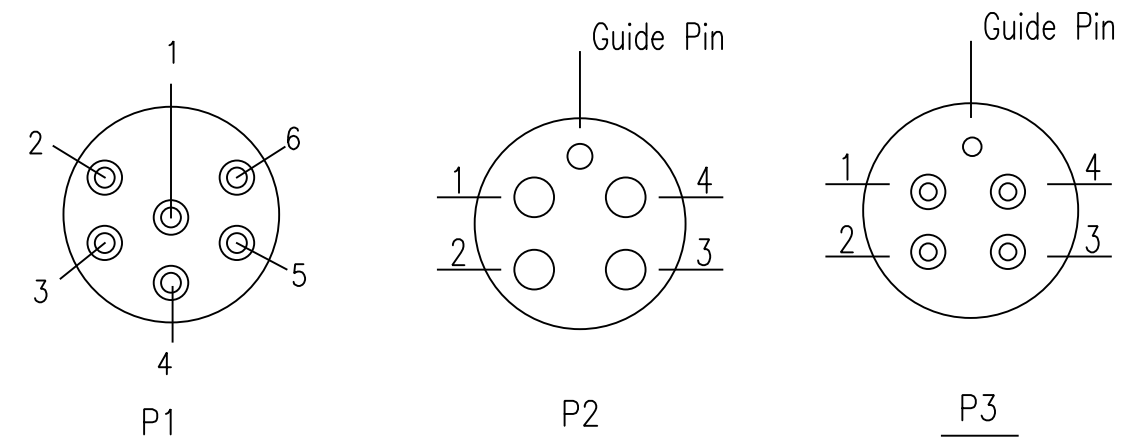

P1 MCIL-6FS	P2 IL-4-FS	P3 MCIL-4FS	
PIN 1	PIN 1	PIN 1	PWR (Common)
PIN 2	PIN 3	---	AMT pH Signal
PIN 3	PIN 2	---	AMT pH Common
PIN 4	---	PIN 2	Oxygen Signal
PIN 5	---	PIN 3	Oxygen Common
PIN 6	PIN 4	PIN 4	Power

TOLERANCES	<b>SEA-BIRD ELECTRONICS, INC</b>			
FRACTIONAL	P/N SEE TABLE	SCALE NTS	DRAWN BY ET	APPR
DECIMAL	TITLE Y-Cable: AMT H2S & SBE 43 to Differential Inputs, MCIL			
ANGULAR	DATE 06/06/16	DRAWING NUMBER	34035	REV