


DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.

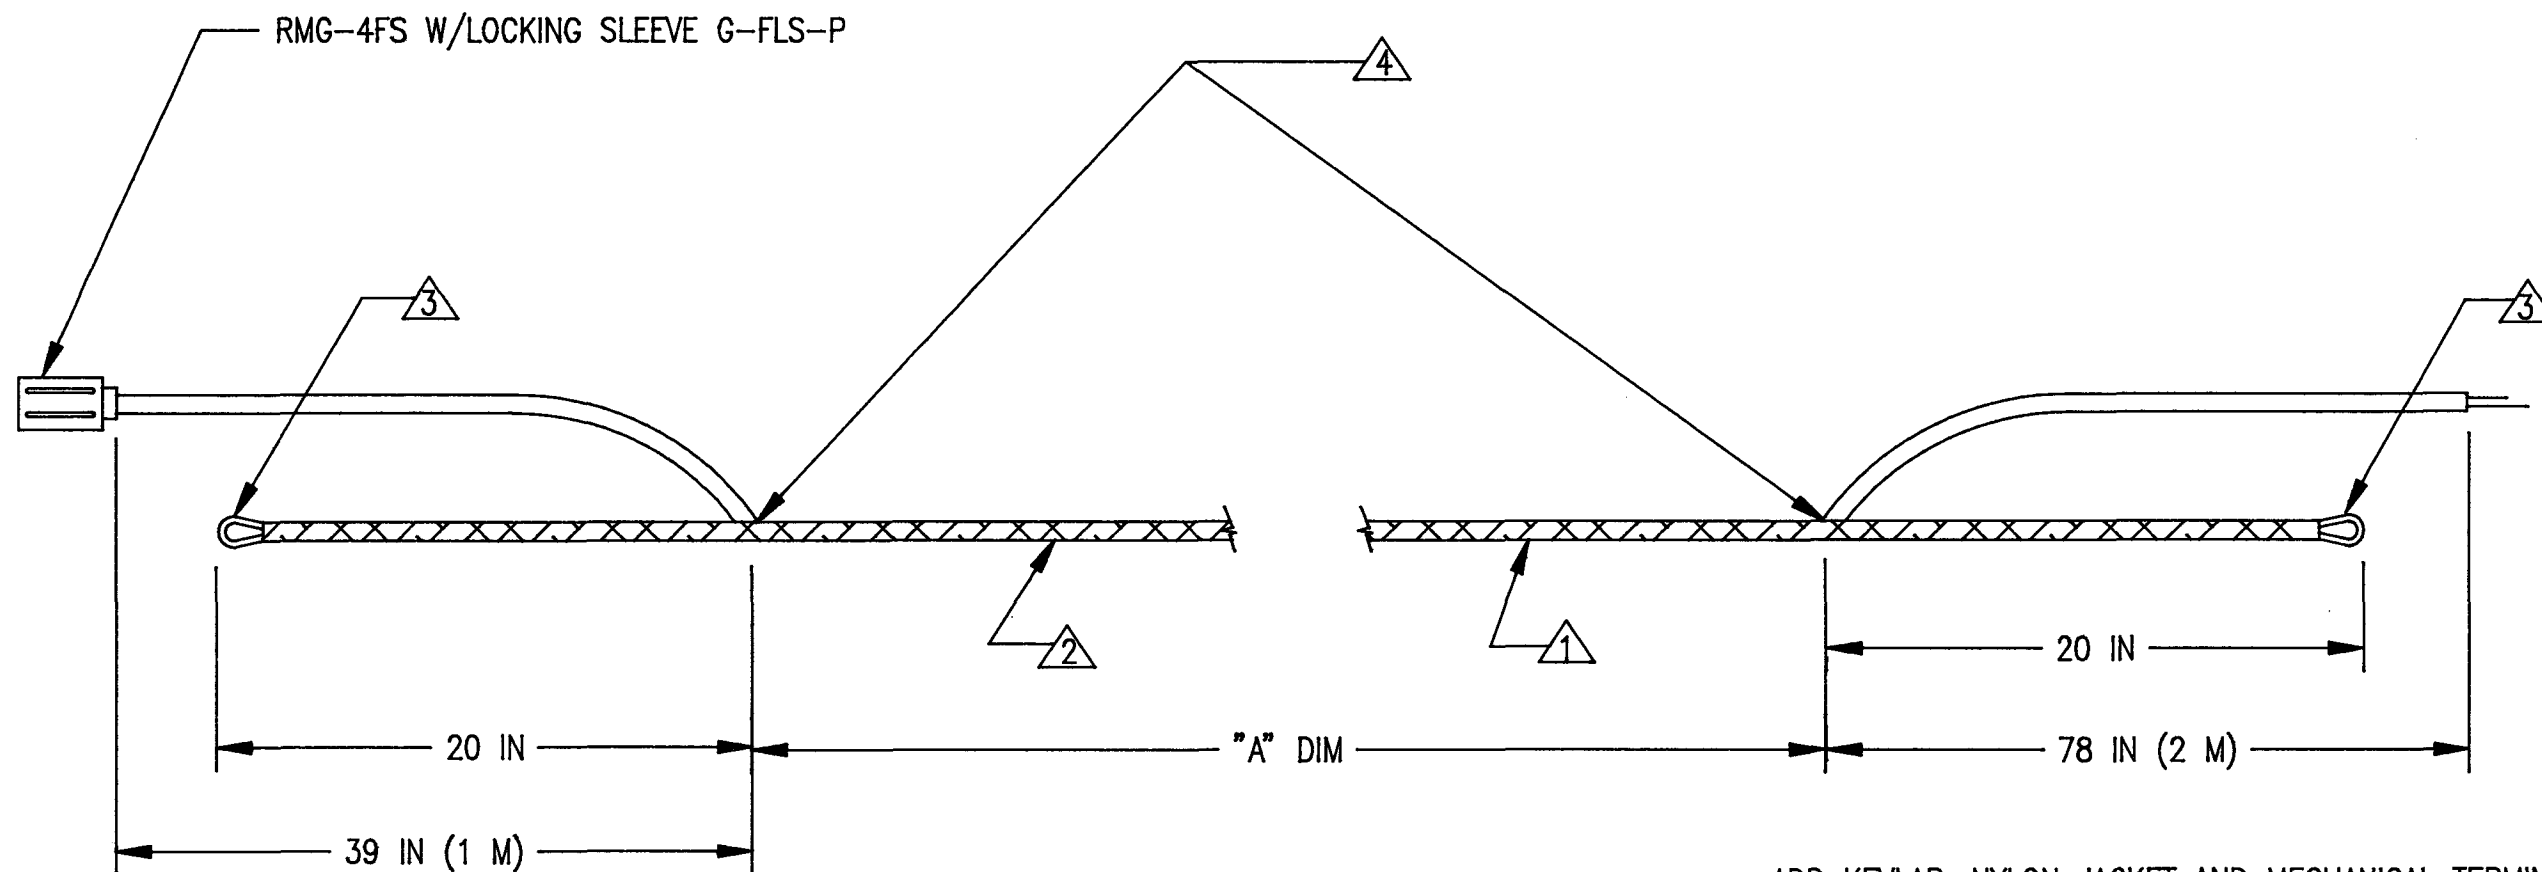

ADD KEVLAR, NYLON JACKET AND MECHANICAL TERMINATIONS TO SEA-BIRD FURNISHED CABLE AS FOLLOWS:

- ① BRAID 2,000 LB MBS KEVLAR TO CABLE CORE
- ② ADD BLACK NYLON JACKET OVER KEVLAR
- ③ EYE SPLICE BOTH ENDS OVER STAINLESS STEEL THIMBLES
- ④ ELECTRICAL PIGTAILS TAKEN OUT BELOW SPLICES

N: PRODUCT.DEF\CABLES\CABLE.DAT\20744.TBL

SBE PART NO	"A" DIMENSION	OVERALL CABLE LGTH
P17764	17 FT (5 M)	27 FT
P17765	50 FT (15 M)	60 FT
P17766	115 FT (35 M)	125 FT
P17767	148 FT (45 M)	158 FT
P17768	181 FT (55 M)	191 FT

TOLERANCES	SEA-BIRD ELECTRONICS, INC			
FRACTIONAL	P/N	SCALE 1:1	DRAWN BY BMC	APPROVED BY
DECIMAL	TITLE CABLE, KEVLAR/NYLON JACKETED			
ANGULAR	DATE 12/20/93	DRAWING NUMBER 20744	REV	

ORIG