


DATE	REV	REVISION RECORD	AUTH.	DR.	CK.
5.17.05	A	ADDED CDOM TO TABLE	CB	KLP	



SBE P/N	DIM A	DIM B	DIM C
171480	22 IN.	24 IN.	22 IN.

P1 AG206	P2 AG206	P3 VMG-4FS	FUNCTION
PIN 1	PIN 1,5,6	PIN 1	PWR COMMON
PIN 2	PIN 2	NC	SEAPOINT SIG.
PIN 3	PIN 3	NC	SEAPOINT COM.
PIN 4	NC	PIN 2	SEATECH SIGNAL
PIN 5	NC	PIN 3	SEATECH COMMON
PIN 6	PIN 4	PIN 4	POWER (+)

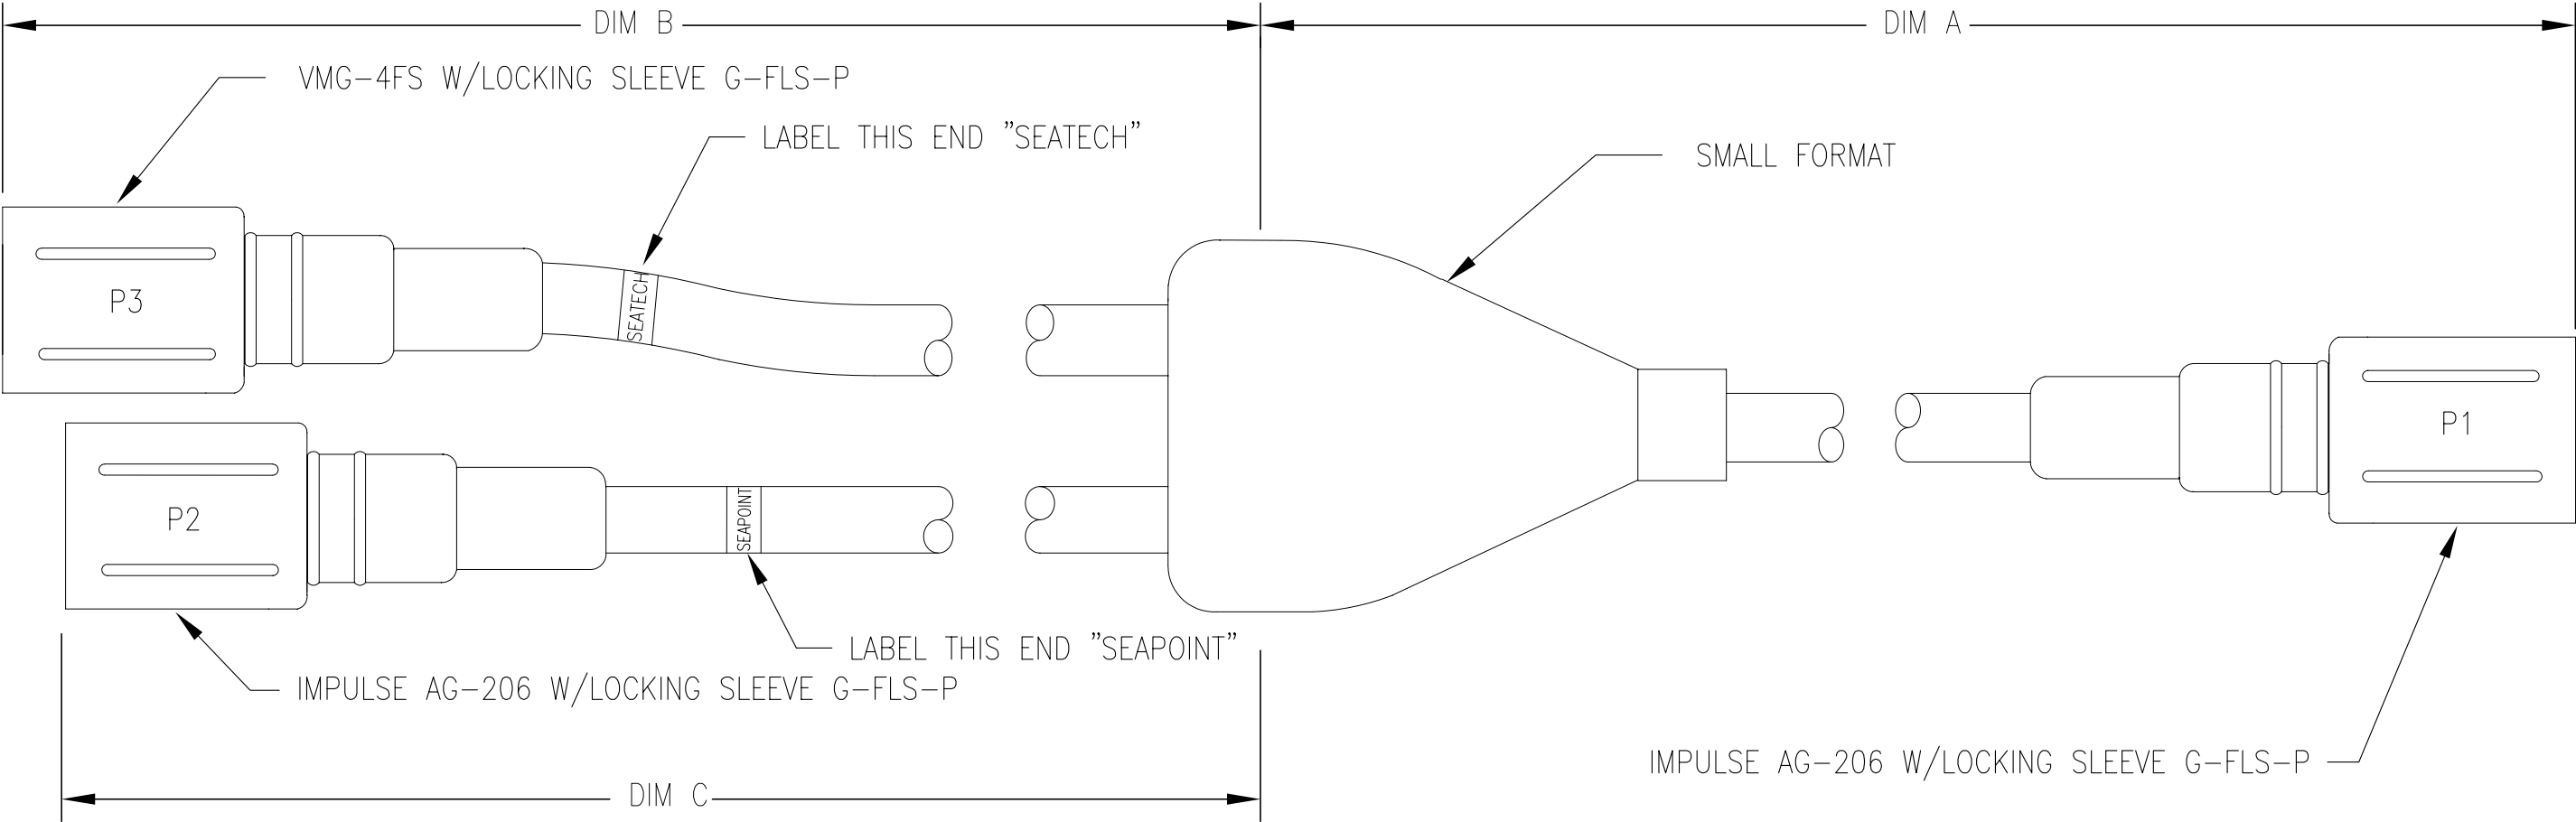

SEAPOINT	GAIN	RANGE
TURBIDITY METER	1X	<750 FTU
FLUOROMETER	1X	150 µg/l
FLUOROMETER	1X	1500 µg/l

TOLERANCES	SEA-BIRD ELECTRONICS, INC			
FRACTIONAL	P/N SEE TABLE	SCALE NTS	DRAWN BY MJ	
			APPROVED BY CB	
DECIMAL	TITLE Y-CABLE: SEAPPOINT AND SEATECH			
ANGULAR	DATE 12.18.00	DRAWING NUMBER 32480		REV A