


DATE	SYM	REVISION RECORD	AUTH.	DR.	CK.
10.31.06	A	ECN 1018, ADD TRB RANGE		KH	
7/23/09	B	ECN 1247: CHANGED CABLE TYPE	CB	PC	CB

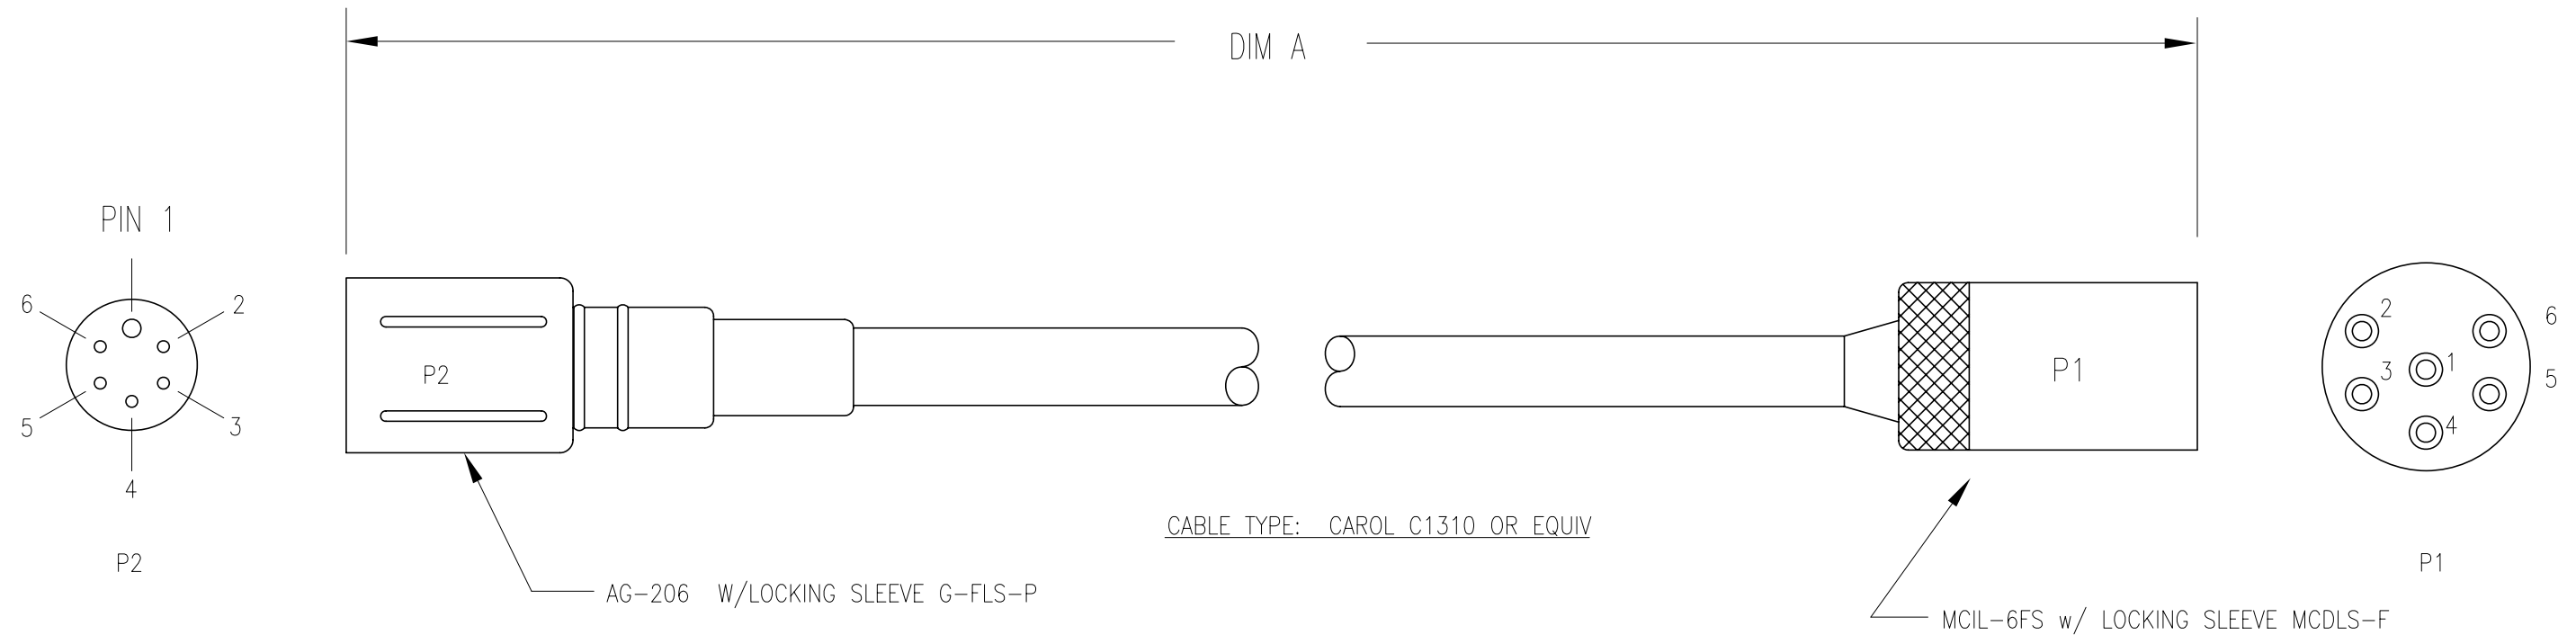

SBE PN	DIM A
171909	42 IN

P1 MCIL-6FS	P2 AG-206	SIGNAL
PIN 1	PIN 6	POWER
PIN 2	PIN 1	POWER GROUND
PIN 3	PIN 2	ANALOG SIGNAL
PIN 4	PIN 3	ANALOG GROUND
PIN 5	---	---
PIN 6	PIN 3	100X GAIN CONTROL

GAIN	CHL RANGE	RWT RANGE	TRB RANGE
100X	0-5 µg/L	0-10 ppb	0-100 NTU

**SEA-BIRD ELECTRONICS, INC**

P/N	SCALE	DRAWN BY	APPROVED BY
SEE TABLE	NTS	KLP	
CABLE: AG-206 TO MCIL-6FS CYCLOPS-7 (X100)			
DATE	DWG NO.	SHEET	REV
10.31.06	32911	1 of 1	B